




Voltage Protection Relay

VPR-22U

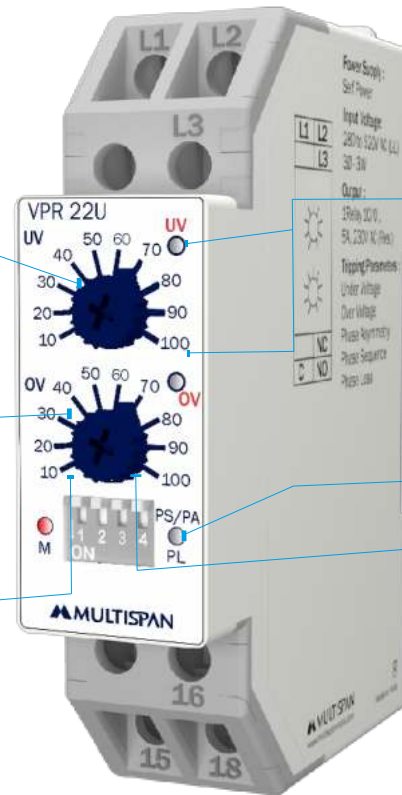

UNDER VOLTAGE KNOB

OVER VOLTAGE KNOB

MAIN LED

for visualisation of power supply status


FAULT INDICATION LED

for under voltage, over voltage, phase sequence, phase asymmetry & phase loss


RED: phase loss
Blinking Red: phase asymmetry
Yellow: phase sequence
OFF: Healthy

PIANO SWITCH

for time range selection & Power ON & Trip Delay Time selection

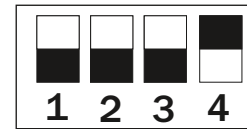

Switch-1 & 2 for Power ON Delay time selection



Switch Settings

SW 1	SW 2	Range	SW 3	SW 4	Range
ON	ON	15 Sec	ON	ON	15 Sec
ON	OFF	10 Sec	ON	OFF	10 Sec
OFF	ON	5 Sec	OFF	ON	5 Sec
OFF	OFF	2 Sec	OFF	OFF	2 Sec

Switch-3 & 4 for Trip Delay time selection



Power Supply : No Power Supply to be given separately



Input Voltage : 280 to 520V AC (L- L) 3Ø -3W

Rated Voltage : 415V AC (L- L)



Output: 1 Relay 1C/O ,5A 230V AC Resistive load



Tripping Parameters : Under voltage
Over voltage
Phase asymmetry
Phase sequence
Phase loss

Terminal Connection

L1	L2
	L3
	16
15	18

Power Supply :


Self Powered

Input Voltage:

280 to 520V AC (L-L)
3Ø - 3W

Output :

1 Relay 1C/O ,
5A, 230V AC (Res.)



Function :

Phase Loss < 280V AC (L - L)
Phase Asymmetry > 40V Fix
Hysteresis : 6V Fix
Rated Voltage: 415V AC (L-L)


Delay Time :

Trip Delay: 15/10/5/0 Sec Selectable
Power ON Delay: 15/10/5/0 Sec Selectable
PS,PL: ≤200ms
Asymmetry: 5 Sec.

LED Indication:


RED: PL
Blinking Red: PA
Yellow: PS
OFF: Healthy

Dimension

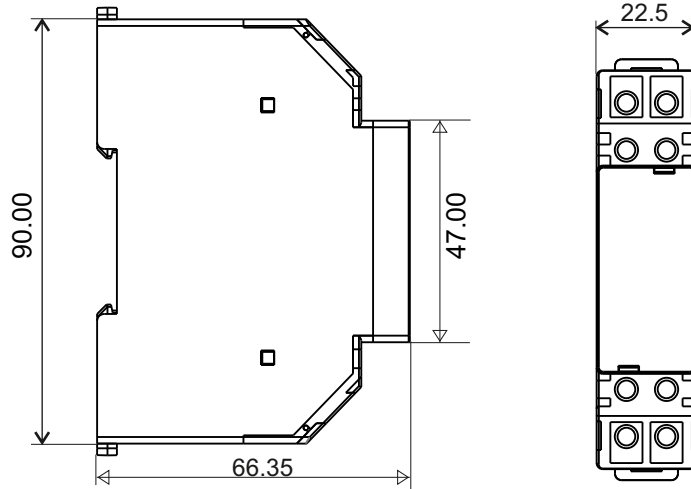

NOTE:
All dimension are in mm.

Control Function

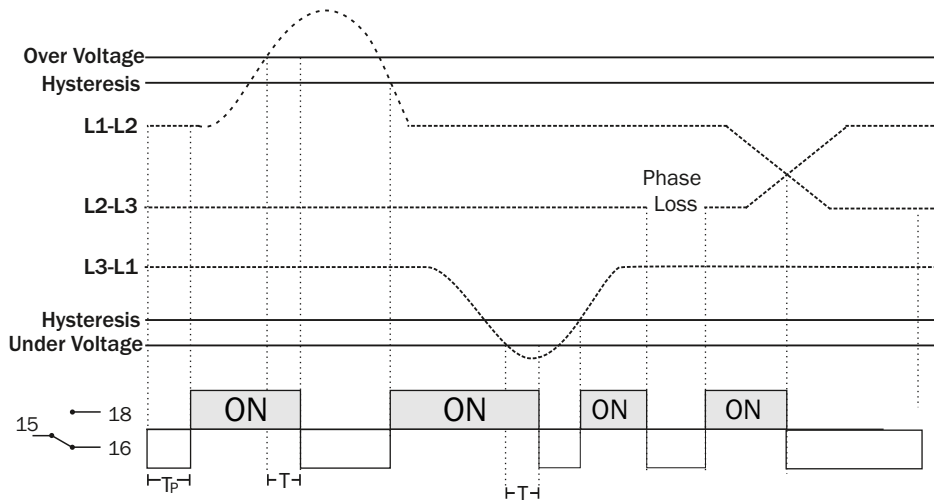

Phase Loss < 280V AC (L-L)
Phase Asymmetry 40V AC (L-L)
Hysteresis 6 V

T_P = Power ON Delay (5 sec)
 T = Trip Delay (5 sec)

SAFETY PRECAUTION

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If all the equipment is not handled in a manner specified by the manufacturer, it might impair the protection provided by the equipment.



Read complete instructions prior to installation and operation of the unit.



WARNING : Risk of electric shock.

WARNING GUIDELINES



WARNING : Risk of electric shock.

1. To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
2. To reduce electro magnetic interference, use wire with adequate rating and twists of the same of equal size shall be made with shortest connection.
3. Cable used for connection to power source, must have a cross section of 1mm or greater. These wires should have insulations capacity made of at least 1.5kV.
4. A better anti-noise effect can be expected by using standard power supply cable for the instrument.

INSTALLATION GUIDELINES

1. This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
2. Do not allow pieces of metal, wire clippings, or fine metallic fillings from installation to enter the product or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
3. Circuit breaker or mains switch must be installed between power source and supply terminal to facilitate power 'ON' or 'OFF' function. However this mains switch or circuit breaker must be installed at convenient place normally accessible to the operator.
4. Use and store the instrument within the specified ambient temperature and humidity ranges as mentioned in this manual.

MECHANICAL INSTALLATION GUIDELINES

- 1) To install the instrument on a DIN rail, raise the clamp at the back of the instrument and place it on the rail. Now release the clamp, so the instrument fits on the DIN rail.
- 2) Ensure proper fitting of the instrument by pulling it outwards.
- 3) To remove the instrument raise the clamp to release it from the DIN rail.
- 4) The equipment in its installed state must not come in close proximity to any heating source, caustic vapors, oil steam, or other unwanted process byproducts.
- 5) Do not connect anything to unused terminals.

Multispan reserves the right to change specifications without prior notice. Printing and typographical errors reserved.
Product improvement and upgrade is a constant procedure.

Multispan Control Instruments Pvt. Ltd.

72/B, Phase 1, GIDC Estate, Vatva, Ahmedabad-382445, Gujarat, India.

☎ +91-9978991476/9978991474/9978991482

✉ Service@multispanindia.com

Follow us



www.multispanindia.com